


POWERKING[®]


Breaking New Grounds Since 1998

Manufactured in
Taiwan

Hydraulic Pile Driver

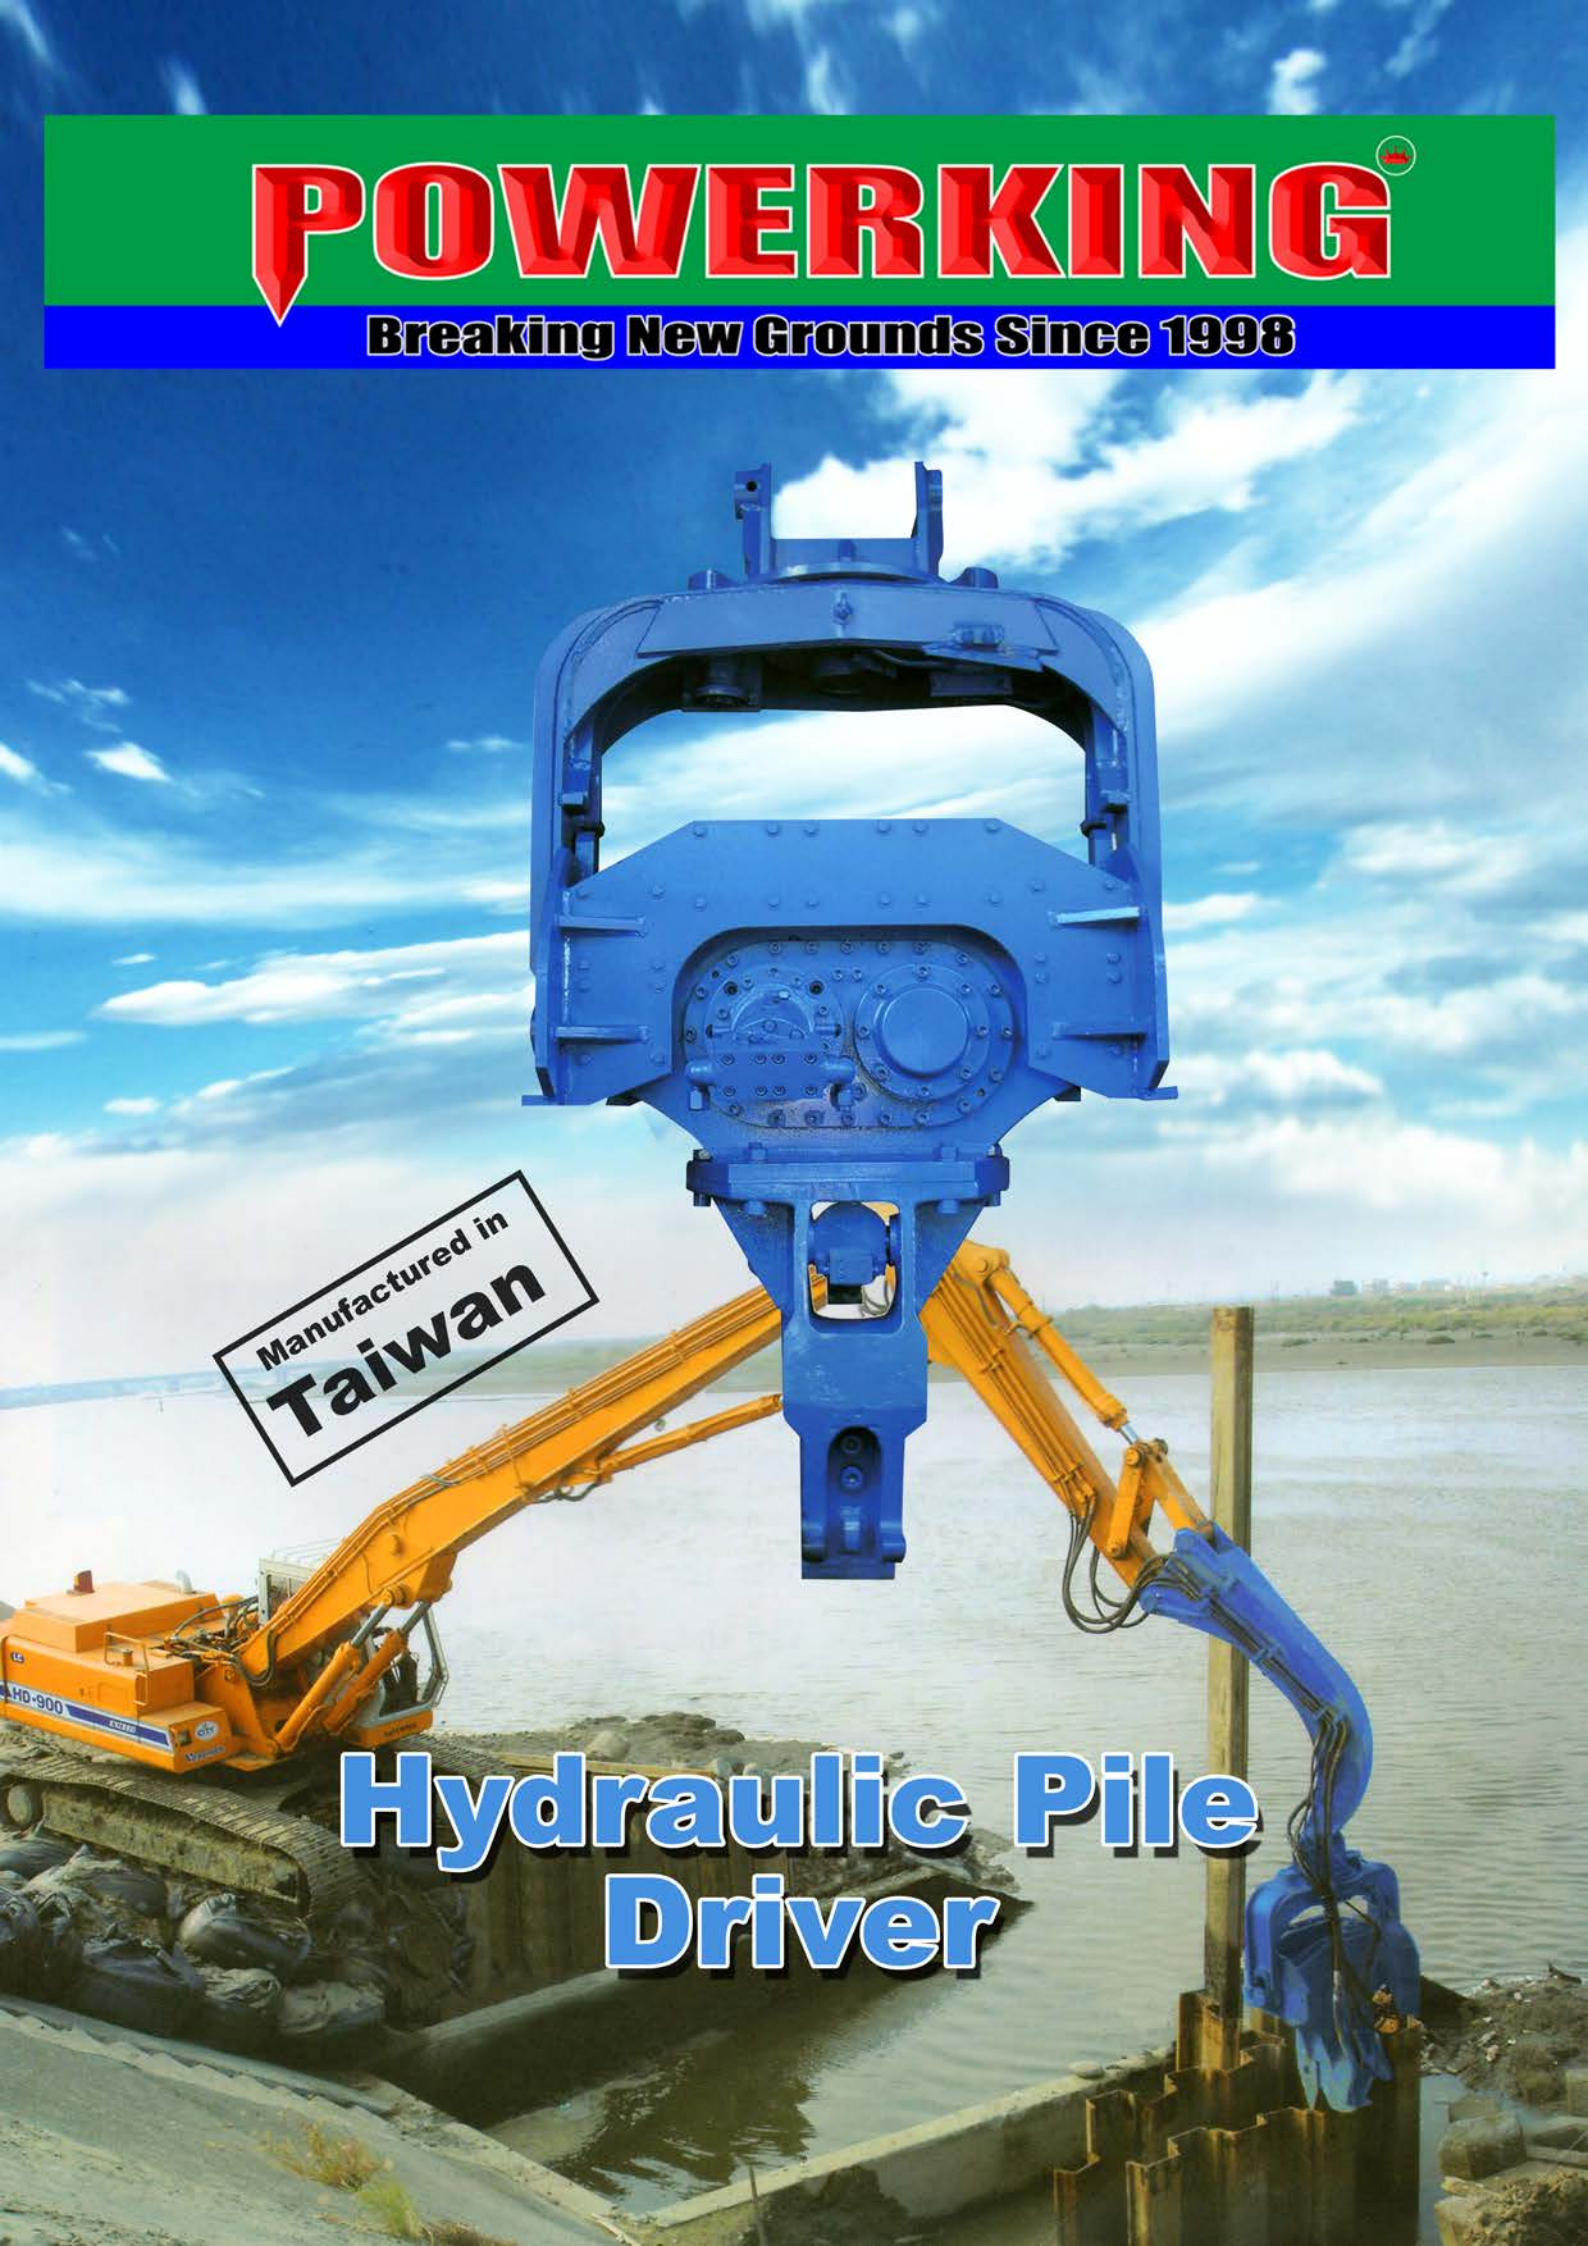

Structure Chart

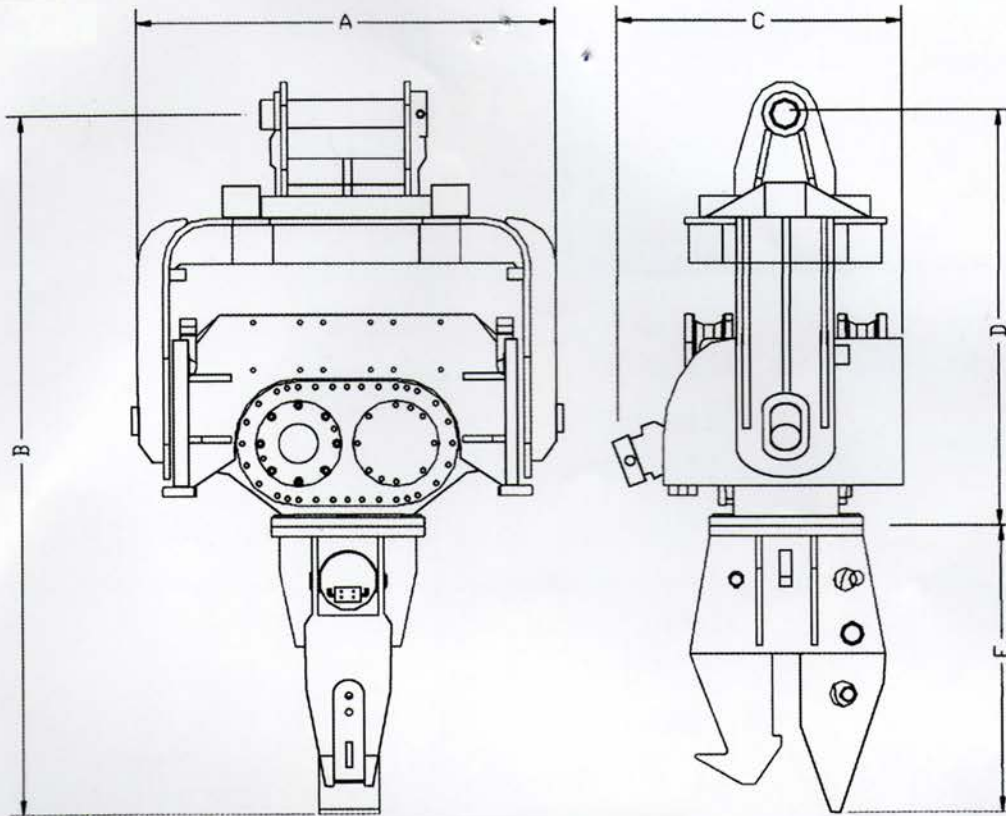

External Dimension

	A	B	C	D	E
ES-200	1200	2120	820	1320	800
ES-300	1330	2320	900	1400	920
ES-400	1500	2560	800	1600	960

Specifications

	ES-200	ES-300	ES-400
Vibration Frequency (Rpm)	3000	2800	2800
Exciting Force (ton)	25	35	40
Operating pressure of the hydraulic system (kg)	300~320	300~320	300~320
Weight (kg)	1850	2500	2850
Applicable excavator models	200~250	300~400	400

Above for machine primary standard specification, the actual machine specification and the equipment, may depend on customer demand ordering.



Corporate Headquarters:

POWERKING

476 Edsa, Caloocan City

Tel. No.: **+632 364-6092**

Fax. No.: **+632 365-7460**

Email: sales@powerking.com.ph

www.powerking.com.ph

Regional Offices:

POWERKING

Subic

Lot3, Baton Area, Subic District,

Argonaut Highway, Subic Bay

Freeport Zone

Tel. No.: **(047) 250-2331**

POWERKING

Cebu City

Ridgedale Subdivision

Tac-an Road, Talamban,

Cebu City

Tel. No.: **(02) 364-6092** (Manila)

POWERKING

Cagayan De Oro

National Highway, Brgy. Ipit,

Municipality of Opol,

Misamis Oriental

Tel. No.: **(088) 305-0032**